RailSafe NLA 114




Location

This unit includes:

- Strathfield at 11.713km
- Homebush at 12.669km
- North Strathfield at 13.308km
- Concord West at 14.450km.


Diagrams

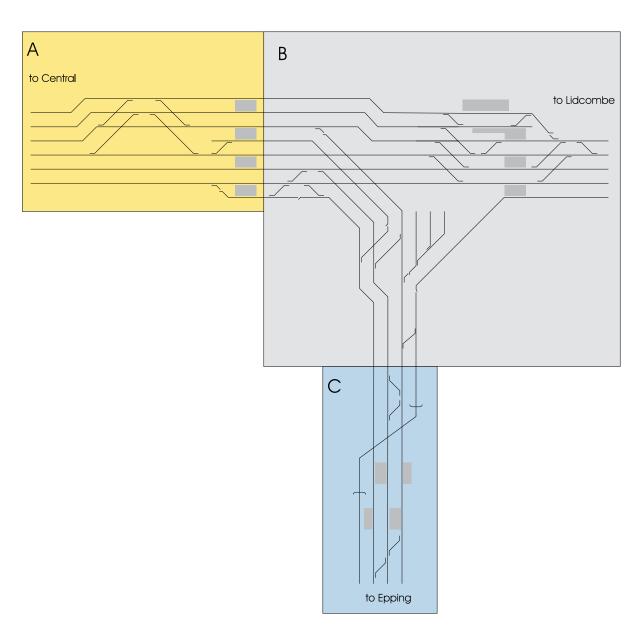

NLA 114 RailŞafe

Network Local Appendices

Strathfield

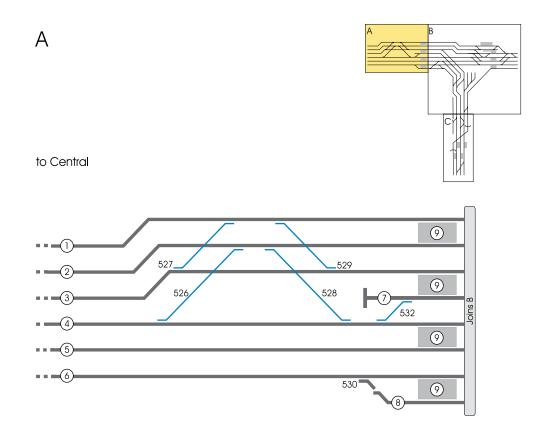

KEY


- 1 Down Local line
- 2 Up Local line
- 3 Down Suburban line
- 4 Up Suburban line
- 5 Down Main line
- 6 Up Main line

- 7 Up North Suburban line
- 8 Up North Main line
- 9 Strathfield

RailSafe NLA 114

Network Local Appendices

Strathfield

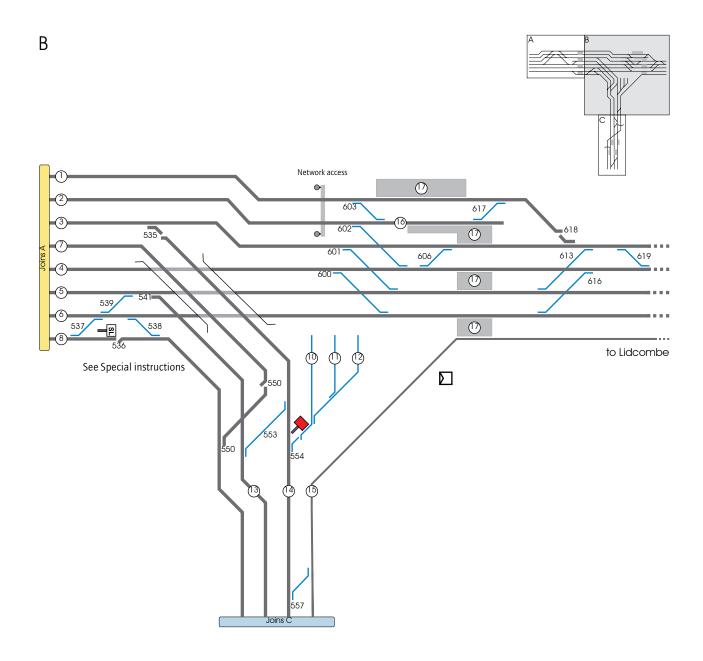

KEY

- 1 Down Local line
- 2 Up Local line
- 3 Down Suburban line
- 4 Up Suburban line
- 5 Down Main line
- 6 Up Main line

- 7 Up North Suburban line
- 8 Up North Main line
- 10 No 1 siding 182m
- 11 No 2 siding 109m
- 12 No 3 siding 150m
- 13 Down North Main line


- 14 Down North Suburban line
- 15 North Strathfield Goods line
- 16 Local Terminal Road line
- 17 Homebush


NLA 114 RailSafe

Network Local Appendices

Strathfield

C

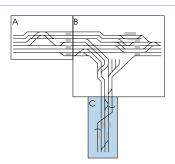

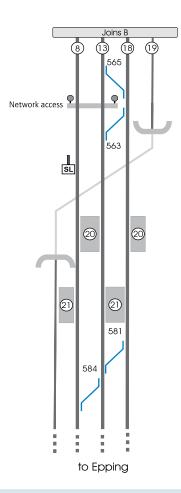

KEY

- 8 Up North Main line
- 13 Down North Main line
- 18 Down Relief line
- 19 Up Relief line

- 20 North Strathfield
- 21 Concord West

Network Control

Signaller at Rail Operations Centre (ROC) (Strathfield panel)

RailSafe NLA 114

Network Local Appendices

Strathfield

Strathfield Yard limits

Strathfield abuts Rhodes on the North Main line and Up and Down Relief lines, and Homebush on the West Main Line, the Suburban lines and Flemington Goods line.

Down Local line	11.042km Down signal ST105L
Up Local line	11.168km Up signal ST104L
Down Suburban line	11.003km Down signal ST103S 14.123km Down Signal ST293S
Up Suburban line	11.168km Up signal ST102S 13.611km Up signal ST276S
Down West Main line	11.352km Down signal ST107M 14.123km Down signal ST291M
Up West Main line	11.168km Up signal ST100M 13.243km Up signal ST268M
Down North Main line	15.263km Rhodes Down signal RS7N
Up Relief Line	13.720km Up signal STI74
Up North Main Line	15.112km Rhodes Up signal STI94N
Down Relief line	15.263km Rhodes Down signal RS5R
Flemington Goods Line	13.611km Up signal ST272G 13.611km Up signal ST272G

NOTE: Kilometrages shown for the Main Goods line (Enfield–Flemington) are via Enfield.

Homebush Yard limits

Homebush abuts Strathfield on the West Main line, the Suburban lines and Flemington Goods line.

	·
Down Main South line	17.639km Down signal ST423LC
Up Main South line	17.669km Up signal ST414LC
Down Main Goods line (Enfield–Flemington)	19.235km Down signal ST369SJD
Up Main Goods line (Enfield–Flemington)	18.890km Up signal ED18.8
Down Suburban line	14.123km Down signal ST293S 19.572km Down signal S12.15
Up Suburban line	19.527km Up signal S12.14 13.243km Up signal ST270S
Down West Main line	14.123km Down signal ST291M 19.572km Down signal M12.15

NLA 114

Network Local Appendices

Strathfield

Up West Main line	EYL YL	11.168km Up signal ST100M 13.243km Up signal ST268M
Flemington Goods Line		13.611km Up signal ST272G
	EYL	13.611km Up signal ST272G

 
Location details



Interlocked points are operated from ROC (Strathfield panel).



See Special instructions



11.713km Strathfield. Platforms 1 and 2, 3 and 4, 5 and 6, 7 and 8



12.090km Down SHUNT LIMIT sign on Up Main North line



12.520km Up electric train STOP sign on No 1 siding 12.669km Homebush. Platforms 2, 3 and 4, 5 and 6, 7



13.076km Down SHUNT LIMIT sign on Up Relief line



13.308km North Strathfield. Platforms 1 and 2, 3



14.450km Concord West. Platforms 1 and 2, 3 and 4

Level crossings



12.464km Network access on the Up and Down Local lines



12.847km Network access on the Up and Down North Main and the Up Relief lines

Special instructions

Automatic normalising of catch points 535

When rail vehicles that do not reliably operate track-circuits are to traverse the Down Suburban - Down Suburban North lines via 535 points, catch points 535 must be locked into position using the point lever to disable the automatic normalising facility.

Work on track North Strathfield Rail Underpass (NSRU)

Before any work on track method or authority can be authorised for work on the Up Relief line at North Strathfield, the Signaller must ensure that:

- · the entire portion of the Up Relief line is unoccupied, and
- all signals giving entry to the Up Relief line in both directions have been set at STOP with blocking facilities applied.



WARNING: Other than during a Local Possession Authority, the use of Lookout Working is **not permitted** from Signal No. ST 174R at North Strathfield to 557 points at North Strathfield on the Up Relief line.

Network Local Appendices

Strathfield

Passing Signals ST164, ST166 and ST168 at Stop

Prior to authorising signals ST164, ST166 or ST168 to be passed at Stop, the Area Controller Strathfield panel must tell the Network Controller about the proposed movement and compile a NRF 012 Unsignalled Movement checklist form. When comiling this form, the movement beyond a starting or home/starting signal on a bi-directional line, but not beyond the yard limits in section two should be selected.

Maintenance Window Local Possession Authority (LPA)

During Maintenance Window LPA's (MW6a, MW6c, MW7, MW8, MW16b, MW16c, MW17a, MW17b, MW 70, MW 71 and MW 72), a worksite may be established within 500 metres of the LPA limit for maintenance activities, inspections and testing if:

- · a set of points can be secured to prevent access to the portion of track, or
- · a Work On Track Authority adjoining the LPA limit is authorised, or
- Lookout Working is established in accordance with NWT 310 Lookout Working.

⚠

WARNING: Worksites with associated rail traffic must not be established within 500 metres of an LPA limit unless a TOA adjoining the LPA limit has been authorised.

Points that are clipped and locked to protect a Maintenance Window LPA may be unclipped in accordance with NSG 616 *Precautions during signalling equipment testing.*

Related documents

NLA 110 Central-Lidcombe

NLA 116 Flemington

NLA 118 Olympic Park

NLA 120 Lidcombe

NLA 300 Strathfield-Hornsby

NLA 500 Lidcombe-Campbelltown

Effective date

21 July 2019