

Eveleigh

Location


Eveleigh is at 1.477km



Warning


This location has narrow track clearances

Diagrams

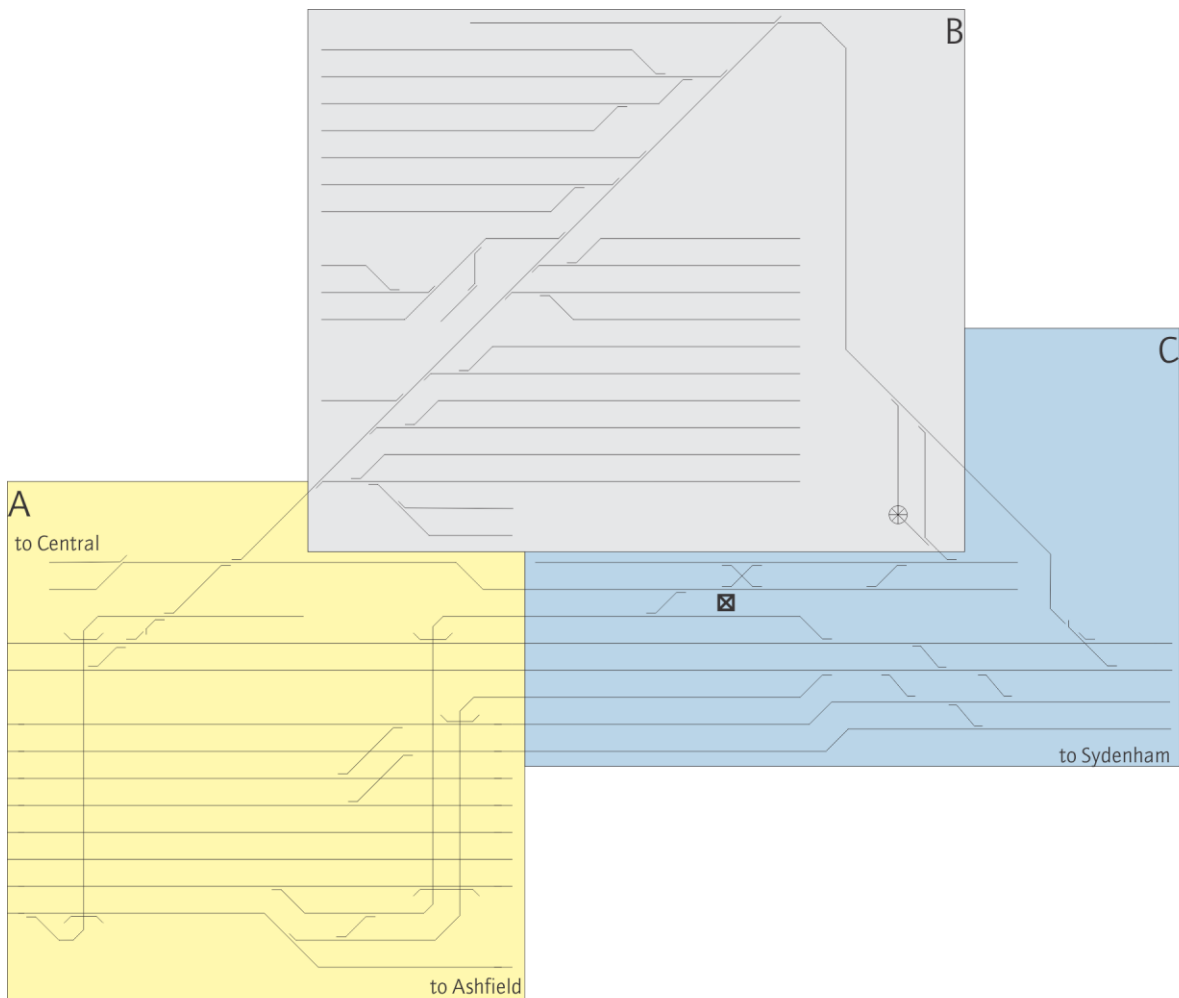

Eveleigh


A

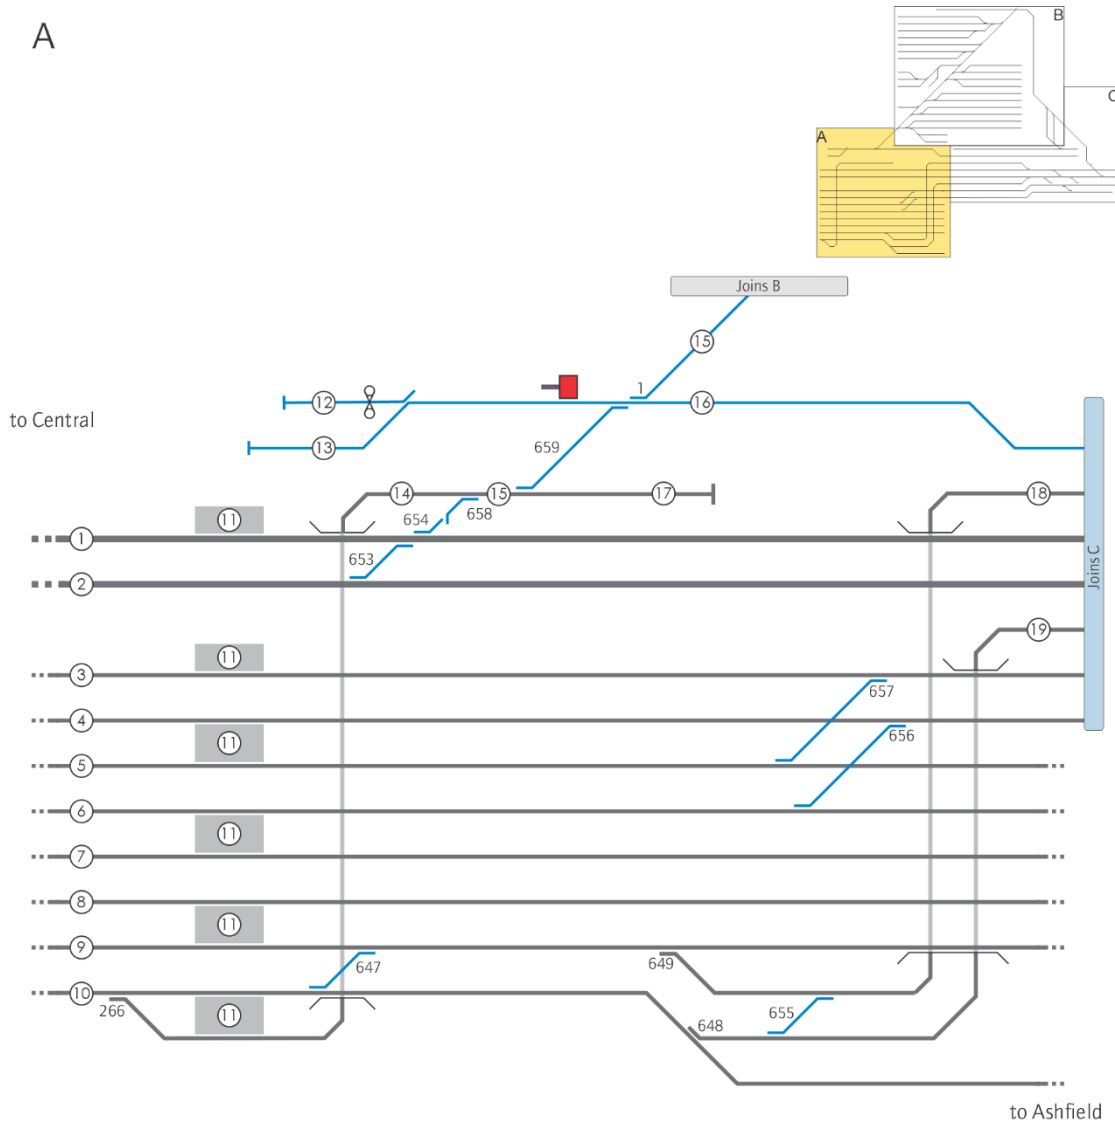

Key		
1 Down Illawarra line	8 Up Suburban line	15 Arrival/Departure road (From 654points to 22 points Map B)
2 Up Illawarra line	9 Down Main line	16 Transfer road
3 Down Illawarra Local line	10 Up Main line	17 Western siding 215m
4 Up Illawarra Local line	11 Redfern	18 Down Illawarra Dive
5 Down Local line	12 Technology Park siding 73m	19 Up Illawarra Dive
6 Up Local line	13 Eastern siding 212m	
7 Down Suburban line	14 Engine Dive	

Eveleigh



B

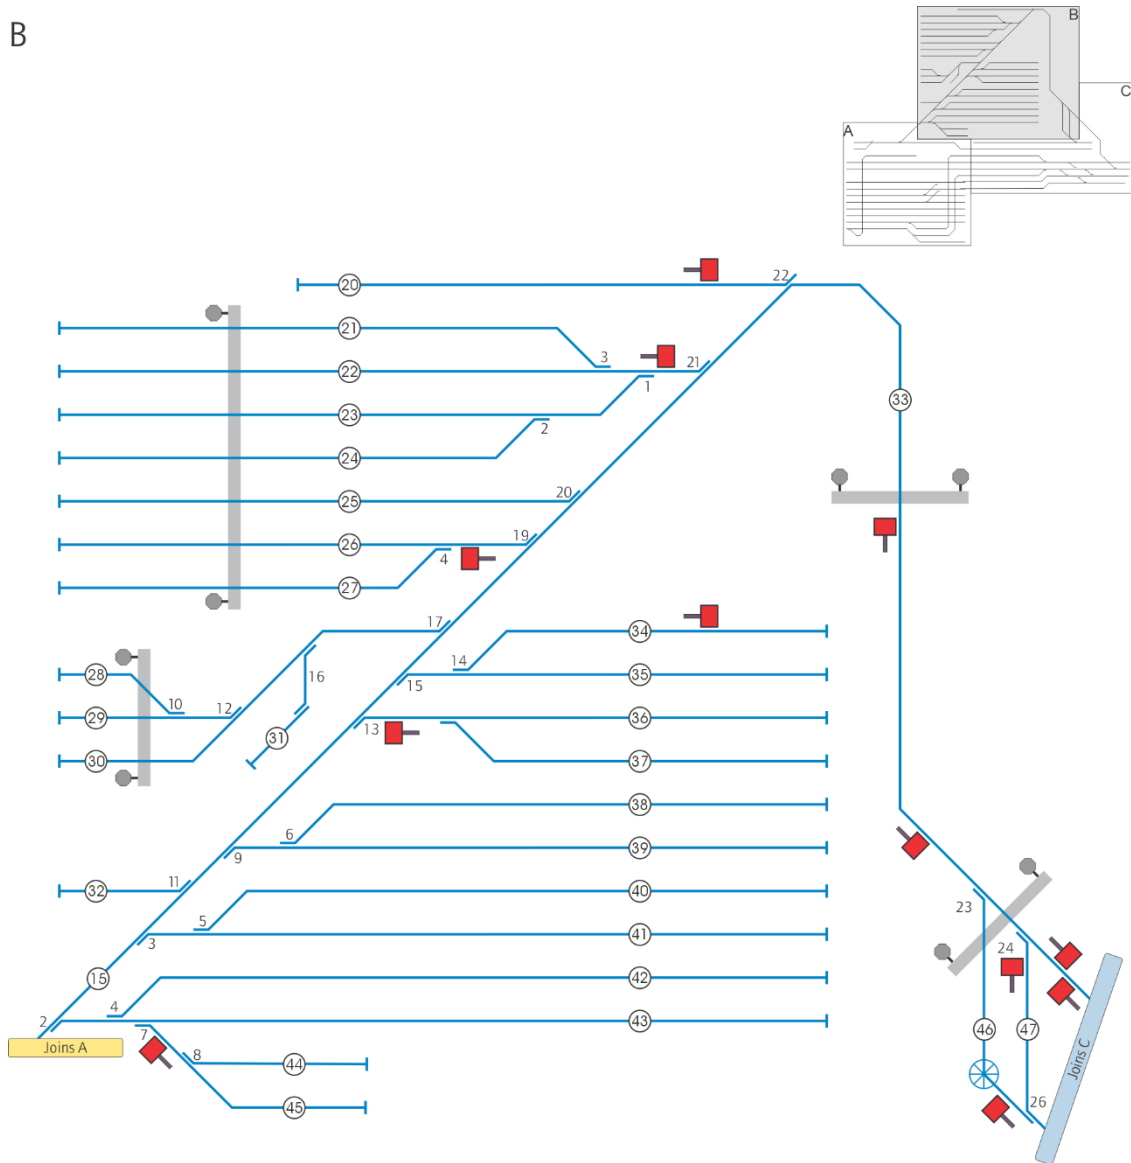

Key		
15 Arrival/Departure road	29 No 2 Xplorer road 122m	38 Eveleigh Intercity Road 6 297m
20 Old Fuel road 125m	30 No 1 Xplorer road 137m	39 Eveleigh Intercity Road 5 319m
21 Annexe road 195m	31 Xplorer extension road 74m	40 OSCAR Shed Road 4 354m
22 No 6 3801 Ltd road 217m	32 Extension road 84m	41 OSCAR Shed Road 3 354m
23 No 5 3801 Ltd road 217m	33 Gate road	42 OSCAR Shed Road 2 376m
24 No 4 3801 Ltd road 246m	34 Eveleigh Intercity Road 10 277m	43 OSCAR Shed Road 1 350m
25 No 3 3801 Ltd road 267m	35 Eveleigh Intercity Road 9 254 m	44 No 2 Engineering siding 187m
26 No 2 3801 Ltd road 208m	36 Eveleigh Intercity Road 8 227m	45 No 1 Engineering siding 195m
27 No 1 3801 Ltd road 208m	37 Eveleigh Intercity Road 7 227m	46 Turntable road 34m
28 No 3 Xplorer road 122m		47 Loco Release road 46m

Eveleigh

C

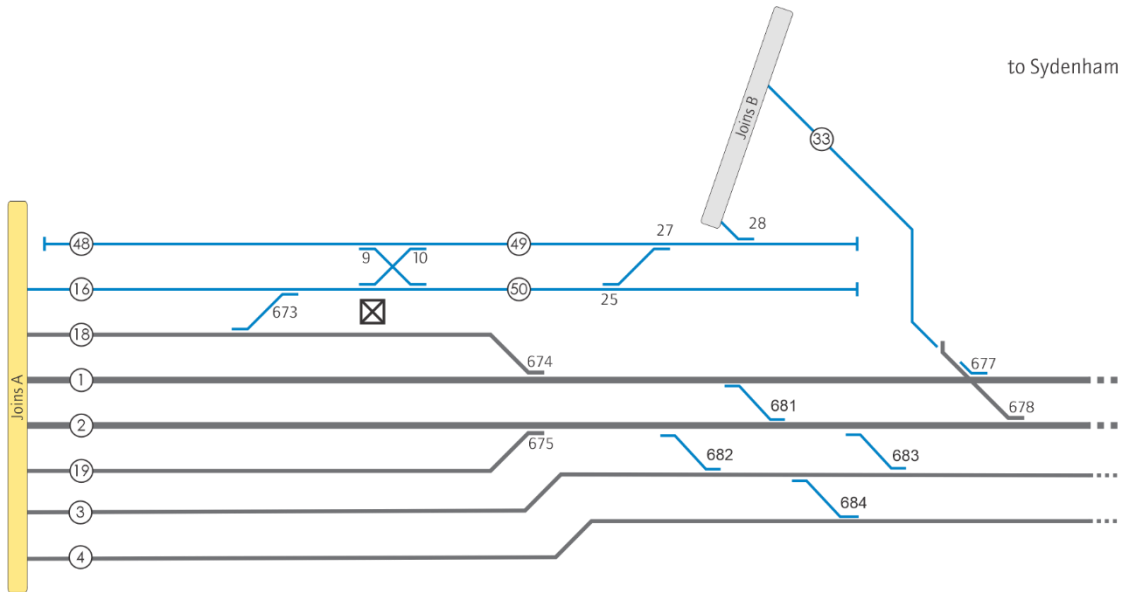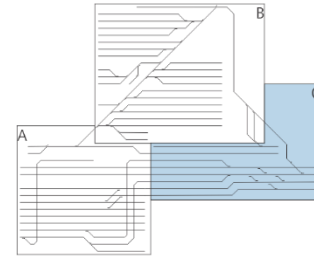

Key		
1 Down Illawarra line	16 Transfer road	48 Storage 90m
2 Up Illawarra line	18 Down Illawarra Dive	49 No 2 Shunting Neck 374m
3 Down Illawarra Local line	19 Up Illawarra Dive	50 No 1 Shunting Neck 374m
4 Up Illawarra Local line	33 Gate road	

Network Control

Network Controller at Rail Operations Centre (ROC)

Signaller at Homebush Control Centre (HCC)

(Signaller ESR panel controls entry and exit of Gate Road only)

Yard Limits

Eveleigh Yard is within Sydney Yard limits

Eveleigh



Location details

Interlocked points are operated from ROC or the local control panel.

- 🚦 2.053km Down electric train STOP sign on No 1 3801 Ltd road
- 🚦 2.089km Down electric train STOP sign on Steam Spray siding
- ☒ 2.154km Local control panel: operates points 9 and 10

Level crossings

- 🚶 1.957km Access road
- 🚶 2.034km Access road
- 🚶 2.240km Access road
- 🚶 2.395km Access road

Special instructions

Rail traffic movements

A Qualified Worker must direct movements within the yard, and control points 9 and 10.

Passenger car trip-trains

XPT cars, Xplorer cars and locomotive-hauled passenger cars must travel as freight trip-trains between the Eveleigh Train Presentation Centre and Flemington or Delec wheel-lathe shop.

Related documents

- NLA 100 *Central*
- NLA 106 *Erskineville-Bondi Junction*
- NLA 110 *Central-Lidcombe*
- NLA 400 *Central-Sutherland*

Effective date

18 August 2023