# ATWS Worksite Protection for Scarborough Routine Network Maintenance Activities



DOCUMENT NO.	D2021/27661
WORK DESCRIPTION	Routine Maintenance activities
WPP Number	SC4BWS 13223
SCOPE:	Routine maintenance activities performed by the South Coast Maintenance team.  on the Up and Down Illawarra lines between 62.791 km to 63.021 km  that does not involve the use of tools or equipment, or  using tools which can be easily and immediately removed from the track by one person and are light, non-powered hand tools, or light battery powered tools or devices.
AUTHORISATIONS:	Protection Officer, ATWS Operator (Operator) & ATWS Installer (Installer):  • Protection Officer (PO) Level 1 – 4, and  • WATWS – Wireless Automatic Track Warning System  Dedicated Lookout: (PO) Level 1 - 4, or Handsignaller 1 - 2
PERSONAL PROTECTIVE EQUIPMENT	High visibility vest, boots, high visibility lookout sleeve
SAFETY CONTROLS – Lookout Working (ATWS) arrangements:  PRESTART	<ul> <li>Automatic Track Warning System (ATWS) - provides visual and audible warning for workers</li> <li>ATWS sensor for up direction running on the Up Illawarra line at 63.513 km</li> <li>ATWS sensor for up direction running on the Down line at 63.513 km</li> <li>ATWS sensor for down direction running on the Up Illawarra line at 62.400 km</li> <li>ATWS sensor for down direction running on the Down Illawarra line at 62.400 km</li> <li>Dedicated lookout(s) at the worksite for unsignalled movements.</li> <li>IMORTANT!</li> <li>This document must not be used to install or adjust the ATWS sensors</li> <li>All sensors in the plan and shown on the diagram must be connected to transmit a warning</li> <li>Refer to D2015-45354 Wireless ATWS (Automatic Track Warning System) to install or remove</li> </ul>
REQUIREMENTS:	sensors  Tools and equipment required:  Protection Officer/Operator requires a phone to contact the Signaller.  ATWS equipment (see Required ATWS equipment checklist)  Digital radios (do not use GRN radios)
FURTHER INFORMATION:	Refer to "D2015/45354 Wireless ATWS (Automatic Track Warning System)" for detailed instructions to set-up, connect, test and operate the ATWS system with pre-installed ATWS sensors  NWT 300 Planning work in the Rail Corridor  NWT 310 Lookout Working  NGE 200 Walking in the Danger Zone  NPR 711 Using Lookouts  NPR 751 Calculating Minimum Warning Time  NPR 712 Protecting work from rail traffic on adjacent lines  NPR 752 Using Wireless Automatic Warning Systems  NLA 410 Sutherland - Wollongong  Lookout Working Prohibited Locations Register

### **ATWS Worksite Protection for Scarborough Routine Network Maintenance Activities**



Required ATWS Equipment				
Item	Description	Quantity		
Aerial	Telescopic Aerial	3		
Assembly Kit	Orange Bag with Tools	2		
Battery ZA24-2.9	Small battery for Junction Box & Transmitter	8		
Device Frame	Protective Frame	3		
F500-AB Junction Box	Receiver Device	4		
F500-SEN Train Sensor	Sensor	4		
Housing for Aerial	Housing for Telescopic Aerial	3		
KF5-5 Extension Cable	Extension Cable (5m) for F500-SEN to F500-AB	2		
Mobile Backpack	Harness for Device	0		
Pouch	Pouch for small battery	4		
Tripod	Tripod for Device	3		
ZFS Radio Transmitter	Radio Transmitter Device	2		
ZPW Warning Unit	Control & Warning Device	1		

Protection Officer/Operator assessment checklist					
Protection Officer's name:		<b>Yes</b> (Tick if Yes)			
This document has not expired 12 month					
SWI details and protection arrangements location, including:	have been reviewed and validated for the	assessed worksite			
<ul> <li>On-site safety assessment has I</li> </ul>	peen completed for relevancy of works bei	ng undertaken			
<ul> <li>The required protection details, SWI</li> </ul>	environment and tasks are unchanged fro	n the details of this			
<ul> <li>All boxes have been ticked if ap</li> </ul>	plicable and crossed if not applicable				
<ul> <li>All fields have been completed</li> </ul>					
Corridor Safety Number	Da	te			

#### Warning

If an above item does not apply, the Protection Officer must not use this Safe Work Instruction. A new worksite protection plan must be completed in accordance with NRF 014 Worksite Protection Pre-work briefing and NRF 015 Worksite Protection Plan.

### **ATWS Worksite Protection for Scarborough Routine Network Maintenance Activities**



Briefing date:

### **Worksite Protection Pre-work Briefing**

rotection Officer details							
	name	signature	contact No.				
Work location:	Scarborough						
Scope of work:	Routine Network Maintenance Ad	ctivities					

Worksite protection: Lookou	t Working (ATWS)	Refer to Worksite Protection Pl	an for details
Hazards (e.g. Site-specific hazards identified, including physical environment, human errors, plant and equipment)	Controls (to be implemented to eliminate or reduce the level)	risk to the lowest practicable	Person responsible for Control
Crossing live lines	A qualified Protection Officer (PO) or Access Corrimake a safety assessment to cross live lines in ac and supervise workers who do not hold the PO or	cordance with NGE200	Qualified PO/ACS
Accessing Danger Zone to conduct plate test	Use appropriate safety measures as validated by a PO. Refer to diagram for minimum safety assessment.		Qualified PO
Electricity	ATWS antennae not to encroach safe approach di	stance to overhead wiring	Operator
Slips, trips, falls carrying ATWS equipment	Use correct manual handling techniques, secure sobstacles for work area and agree a safe path.	afety boots, clear	All
Approaching rail traffic	Lookout Working using approved ATWS as asses All points of entry have been validated and ATWS have been installed. Confirm with the Operator that the ATWS has bee Workers immediately move to the designated safe Provide ALL CLEAR handsignal after workers and place. After the warning has been cancelled, confirm the traffic between the sensors and the worksite before	n tested and is operational. place when warned. equipment are in a safe re is no approaching rail e allowing work to resume.	PO
Ineffective ATWS warnings / Adjoining / surrounding worksites	Test and confirm workers can see and hear the warenvironment.  Explain the emergency warnings.  Workers to be within 50m of warning device.  Workers to always remain within sight and hearing Radios not to be used near ATWS.		PO
Train warning time longer than expected (stopping points or ATWS equipment fault)	Workers to remain in a safe place until confirmed the ATWS is working correctly.  Contact the Signaller or visually confirm the line is clear between the sensors and the worksite.		PO
Unsignalled movements in Yard limits	Potential stopping points: Scarborough Station Platform Limits  Position lookout(s) in safe place.  Confirm minimum sighting distance can be achieved.  Test effective communication and be within sight and hearing of the workers.		PO / lookouts
Bi Directional rail movements	ATWS sensors in place on both tracks in both dire approaching rail traffic.	ctions to warn workers of	PO
Second train warning cancelled in error	Nominate a team member to confirm with the Operator when each rail traffic has completely passed the worksite.  Tell the PO and workers about the second train warning.  Cancel each warning after each train has completely passed the worksite.		Operator / nominated team member
Distraction	Obtain permission from PO to use electronic device	<u> </u>	All
Obstructions to safe place	Agree on paths to reach designated safe places fr	om the worksite.	РО
Electrical storms	Stop work immediately		All

# ATWS Worksite Protection for Scarborough Routine Network Maintenance Activities



Hazards (e.g. Site-specific hazards identified, including physical environment, human errors, plant and equipment)	Controls (to be implemented to eliminate or reduce the risk to the lowest practicable level)	Person responsible for Control

### ATWS Worksite Protection for Scarborough Routine Network Maintenance Activities



<b>Network Mainte</b>	nance Activities		
Vorkplace Supervisor detail	s		
	name		contact No
Emergency assembly point:		SWMS/SWI Ref #:	
First aid kit location:		First aider:	
Vorkplace Supervisor acl	knowledgement		
	dges that all identified WHS and rail safety	hazards have the Yes	signature
Participant Acknowledger	ment		
NOTE: Recipients of the briefing are	e to question the Briefer if they don't unders	stand any part of this briefing.	
All workers listed below acknowledg	ge that they:		
have been inducted to the site		6. have been briefed on the content	s of the Worksite Protection Plan
are free from alcohol and drug		7. have been shown the Worksite F	<del>-</del>
are free from the effects of fati	•	understand the kinds and limits of the standard limits limits and standard limits limits limits limits and standard limits li	·
licence and/or induction record	t Rail Safety Worker Authorisation, trade d e.g. Construction Industry Induction rsonal Protective Equipment (PPE)		v hazards and controls identified during respection must be conducted immediately
	if the item applies or a cross 🗷 if the item does	s not apply.	
	uirements of the electrical permit (if		azardous materials/substances on site
required)	, ,	have been briefed on Safety Dat	
have been briefed on the SWN for the job	/IS/SWIs/documented safe work practice	have been briefed on the WHS N	
have been instructed in the co	ntrols recorded in this document and	have been briefed on the hazard	s of adjoining worksites/processes.
Name	Signature	Time of briefing:	Amendment briefing: hh:mm and initial
		111.11111	III.IIIII alia lilitai


## **ATWS Worksite Protection for Scarborough Routine Network Maintenance Activities**



	1						
		Wol	llongong No	rth Panel			02 4223 5446
rotection Office	r details						
	name			signature			contact No
	RSW or RIW No.		de	esignation	Planned d	uration	
Workplace Supe	rvisor details:						
Type of work:	Routine Network Main	tenance Activities					
Worksite loca	ation						
On the		U	lp Illawarra line				
between	WG 621 U Signal (62	2.790 Km)	and	WG	6 618 U Signal (	63.021 Km)	
On the		Do	wn Illawarra lin	Δ			
Officie			wii illawaii a illi	<b>-</b>			
between	WG 619 D Signal (62	2.790 Km)	and	WG	616 D Signal (	63.021 Km)	
las the Lookout Varning metho	ssment : Working Prohibited L d  g Time Calculations	ocations Register	been const	ulted? Yes			
las the Lookout Varning metho	Working Prohibited L d g Time Calculations	_	been consi	ulted? Yes			
las the Lookout Varning metho Iinimum Warnin	Working Prohibited L  d  g Time Calculations  eed 80 km/h	ATWS	been const ion of ATWS Sensors		00 km and	63.51:	3 km
las the Lookout Varning metho Iinimum Warnin Maximum track spe	Working Prohibited L  d  g Time Calculations  eed 80 km/h  Sensors used	ATWS  Posit	ion of ATWS		00 km and	63.51:	
las the Lookout Varning metho  linimum Warnin Maximum track spe  Number of ATWS S	Working Prohibited L  d  g Time Calculations  eed 80 km/h  Sensors used	ATWS  Position  Position	ion of ATWS Sensors on of Lookouts	62.40	00 km and		
las the Lookout Varning metho  linimum Warnin Maximum track spe  Number of ATWS S	Working Prohibited L  d  g Time Calculations  eed 80 km/h  Sensors used  ed Lookouts used	ATWS  ATWS  Position  Position  Position  Position  A Position  Position  A Po	ion of ATWS Sensors on of Lookouts along the works	62.40	00 km and and 11 km To		km Up Illawarra
las the Lookout Varning metho Iinimum Warnin Maximum track spe Number of ATWS S Number of dedicate Note - Lookouts are r	Working Prohibited L  d  g Time Calculations  eed 80 km/h  Sensors used  ed Lookouts used  elocated to positions within the	ATWS  Position  Position  ATWS  ATWS  Position  Figure 1  ATWS	ion of ATWS Sensors on of Lookouts along the works	62.40 62.79 ite.	00 km and 01 km To 0	63.021	km Up Illawarra line Down
las the Lookout Varning metho  linimum Warnin Maximum track spe  Number of ATWS S  Number of dedicate Note - Lookouts are r  7 sec + + + + + + + + + + + + + + + + + + +	g Time Calculations  eed 80 km/h  Sensors used  ed Lookouts used elocated to positions within these  3 sec + 10 sec  3 sec + 10 sec  Move Time Safe Time	ATWS  ATWS  Position  Position  Position  ATWS  ATWS	ion of ATWS Sensors on of Lookouts along the works  20 sec 20 sec	62.40 62.79 ite.	00 km and and To m/h Mini	63.021  445 metres  445 metres	km Up Illawarra
las the Lookout Varning metho  linimum Warnin Maximum track spe Number of ATWS S  Number of dedicate Note - Lookouts are r  7 sec +  7 sec +  7 sec +  8 See Time (S)	g Time Calculations  eed 80 km/h  Sensors used  ed Lookouts used  elocated to positions within these  3 sec + 10 sec  3 sec + 10 sec  Move Time (M)  Safe Time	ATWS  ATWS  Position  Position  Position  ATWS  ATWS	ion of ATWS Sensors on of Lookouts along the works  20 sec 20 sec	62.40 62.79 ite. 80 k	00 km and 01 km To 01 km Mining d Mining 100 km	63.021 445 metres 445 metres	km Up Illawarra line Down
las the Lookout Varning metho  linimum Warnin Maximum track spe Number of ATWS S  Number of dedicate Note - Lookouts are r  7 sec + + + + + + + + + + + + + + + + + + +	g Time Calculations  eed 80 km/h  Sensors used  ed Lookouts used  elocated to positions within the  3 sec + 10 sec  3 sec + 10 sec  Move Time (M)  Sensors used	ATWS  ATWS  Position  Position  ATWS  ATWS  Minimum Warning Time  (MWT)  (S+M+10 sec = MW)  Minimum Warning Time  (MWT)	ion of ATWS Sensors on of Lookouts along the works  20 sec 20 sec	62.40 62.79 ite. 80 k 80 k	00 km and and To m/h Mining d	63.021  445 metres  445 metres  imum Sighting Distance as	km Up Illawarra line Down
las the Lookout Varning metho linimum Warnin Maximum track spe Number of ATWS S  Number of dedicate Note - Lookouts are r  7 sec + + + + + + + + + + + + + + + + + + +	g Time Calculations  eed 80 km/h  Sensors used  ed Lookouts used  elocated to positions within the  3 sec + 10 sec  3 sec + 10 sec  Move Time (M)  Safe Time	ATWS  ATWS  Position  Position  ATWS  ATWS  Minimum Warnining  Time  (MWT)  (S+M+10 sec = MW)	ion of ATWS Sensors on of Lookouts along the works  20 sec 20 sec	62.40 62.79 ite. 80 k 80 k	200 km and	63.021  445 metres  445 metres  imum Sighting Distance as calculated 5 metres  Sighting	km Up Illawarra line Down
las the Lookout Varning metho  linimum Warnin Maximum track spe Number of ATWS S  Number of dedicate Note - Lookouts are r  7 sec + + + + + + + + + + + + + + + + + + +	g Time Calculations  eed 80 km/h  Sensors used  ed Lookouts used elocated to positions within the  3 sec + 10 sec + 10 sec  Move Time (M)  3 sec + 10 sec = Safe Time	ATWS  ATWS  ATWS  Position  Position  Position  A Position  Position  Position  A Position  A Position  A Position  A Position  See KMs as workers move  Minimum Warning Time  (MWT)  (S+M+10 sec = MWT)	ion of ATWS Sensors on of Lookouts along the works  20 sec 20 sec 7)	62.40 62.79 ite.  80 k 80 k  Track spee	20 km and	63.021  445 metres  445 metres  imum Sighting Distance as calculated  5 metres  Sighting as calculated	km Up Illawarra line Down
las the Lookout Varning metho  linimum Warnin Maximum track spe Number of ATWS S  Number of dedicate Note - Lookouts are r  7 sec	g Time Calculations  eed 80 km/h  Sensors used  ed Lookouts used elocated to positions within these  3 sec + 10 sec + 10 sec  Move Time (M)  3 sec + 10 sec = Safe Time  safe places identified	ATWS  ATWS  Position  Position  ATWS  ATWS  Position  A MWT)  (S+M+10 sec = MWT)  A Position  A Position  A MWT)  (S+M+10 sec = MWT)  A For the ATWS O	ion of ATWS Sensors on of Lookouts along the works  20 sec 20 sec 7)  15 sec	62.40 62.79 ite.  80 k 80 k  Track spee	20 km and	63.021  445 metres  445 metres  imum Sighting Distance as calculated  5 metres  Sighting as calculated	km Up Illawarra line Down
Ias the Lookout Varning metho Iinimum Warnin Maximum track spe Number of ATWS S  Number of dedicate Note - Lookouts are r  7 sec + + + + + + + + + + + + + + + + + + +	g Time Calculations  eed 80 km/h  Sensors used  ed Lookouts used elocated to positions within the  3 sec + 10 sec + 10 sec  Move Time (M)  3 sec + 10 sec = Safe Time	ATWS  ATWS  Position  Position  ATWS  Position  ATWS  In Position  A Position  A Position  A Position  A Position  A Position  In Position  A Position  In Position  A Position  In In In Position  In I	ion of ATWS Sensors on of Lookouts along the works  20 sec 20 sec 7)  The 15 sec	62.40 62.79 ite.  80 k 80 k  Track spee	20 km and	63.021  445 metres  445 metres  imum Sighting Distance as calculated  5 metres  Sighting as calculated	km Up Illawarra line Down

### **ATWS Worksite Protection for Scarborough Routine Network Maintenance Activities**



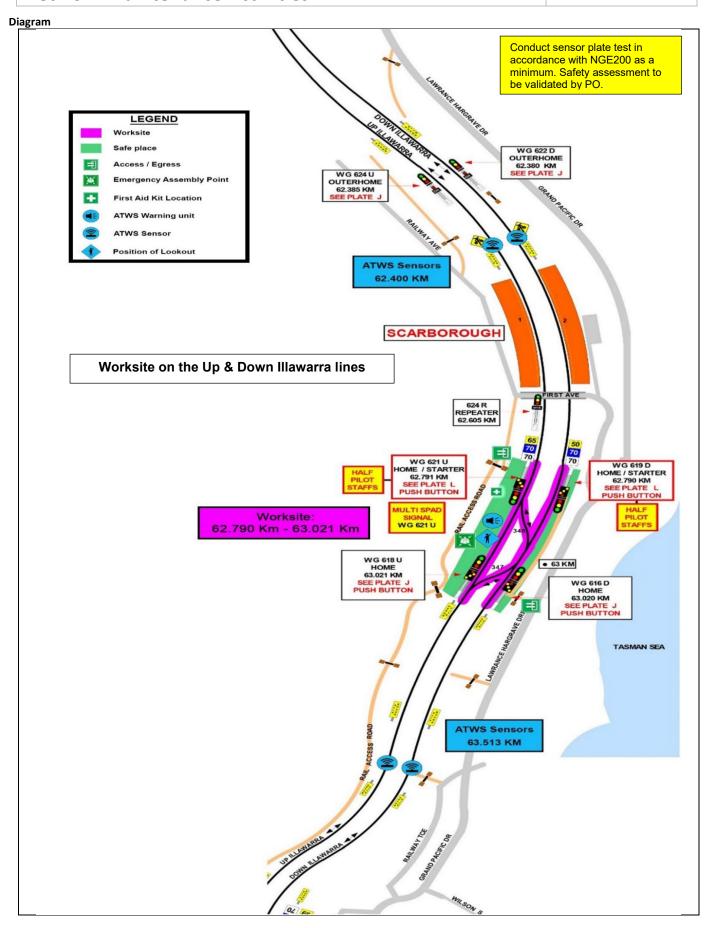

## ATWS Worksite Protection for Scarborough Routine Network Maintenance Activities

equipment are clear of the Danger Zone.



INSTRUCTIONS:	<ol> <li>Workers enter the rail corridor via access gate 100 63.017 U</li> <li>Use assets to validate worksite location on Up and Down Illawarra lines between 62.791km to 63.021km</li> <li>Conduct WP Pre-work briefing to set-up ATWS.</li> <li>Tell Signaller at Wollongong North Panel about the use of lookout working with ATWS.</li> </ol>
	<ol> <li>Access Up Cess 62.400km via access gate 100 62.460 U, verify sensor label &amp; connect to sensor cable, calibrate with test plate, connect, and turn on the transmitter.</li> </ol>
	<ol> <li>Access Up Cess 63.513km via access gate 100 63.183 U, verify sensor label, connect to sensor cable, calibrate with test plate, connect &amp; turn on transmitter.</li> </ol>
	<ol> <li>Place warning system on same side of tracks if working on one track only within sight &amp; hearing of workers, conduct siren &amp; light self-test, &amp; connect to transmitter(s).</li> <li>Record first rail traffic movement test for each sensor on ATWS Check-sheet.</li> </ol>
	<ol><li>Conduct WP Pre-work briefing for lookout working with ATWS and confirm workers have seen and heard the warning.</li></ol>
	<ul><li>Start work when advised by the PO and move to the designated safe place when warned.</li><li>When work is complete, and workers and equipment are in a safe place, turn off and pack up warning unit</li></ul>
	12. Access Up Cess to turn off and pack up transmitter unit(s).
	13. Access Up Cess to turn off and pack up transmitter unit(s).
	14. Access Up Cess for all workers to leave the rail corridor via access gate 100 63.017 U
	15. Tell Signaller at Wollongong North Panel when work is completed, and the workers and their

### ATWS Worksite Protection for Scarborough Routine Network Maintenance Activities



#### Position of ATWS transmitter and sensor on the Up and Down Illawarra line at 62.400 KM



Image 1: Transmitter and sensor installation location

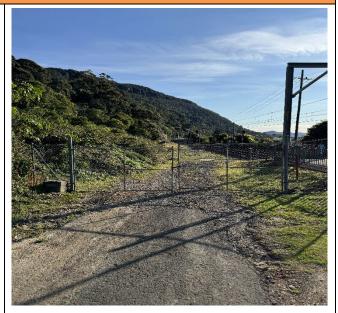


Image 2: Sensor access using access gate 100 62.460 U

#### Position of ATWS transmitter and sensor on Up and Down Illawarra line at 63.513 KM



Image 1: Transmitter and sensor installation location



Image 2: Sensor access using access gate 100 63.183 U

### **ATWS Worksite Protection for Scarborough Routine Network Maintenance Activities**



Protectio	n Officer's	diary
Date	Time	Notes
	1	
	1	
	1	
	<del>                                     </del>	
	<del> </del>	
Ì	1	

### ATWS Worksite Protection for Scarborough Routine Network Maintenance Activities



(This page is optional and may be separated and given to the assigned operator to assist set- up of ATWS equipment. Refer also to Refer to "D2015-45354 Wireless ATWS (Automatic Trak Warning System)" for detailed instructions.)

	Setup Stage 1: Checklist for ATWS transmitter and sensor			
Step	Task Description	Installer Check		
1	Verify Track Label for location of sensor as per the Protection Diagram and			
	Photos in this document			
2	Confirm equipment is within inspection date			
3	Sensor direction is per Worksite Protection Diagram and photos in this			
	document			
4	Connect sensor cable to junction box			
5	Confirm all batteries are fully charged			
6	Connect junction box to ZFS using channel T1-T4			
7	Commence calibration and automatic self- test			
8	Perform function test using test plate			
9	Confirm transmitter booked in to correct T- channel (T1-T4)			
10	Select & confirm channel for the radio transmitter (AU3 OR AU4)			
11	Perform worksite warning test using test plate			
12	Lock device & remove key			

	Setup Stage 2: checklist for ATWS worksite warning unit	
Step	Task Description	Operator Check
1	Confirm equipment is within inspection date	
2	Confirm Audible level	
3	Confirm and set Radio Channel for Warning unit	
4	Book in ATWS sensor 1	
5	Book in ATWS sensor 2	
6	Book in ATWS sensor 3	
7	Book in ATWS sensor 4	
8	Perform Worksite Warning Test with all ATWS sensor	
9	Ensure the workers have seen the visual warning and heard the audible warning	
10	Select and Confirm Channel for the Radio Transmitter	
11	Confirm worksite warning unit is operational with Installers and advise them to lock devices & remove key	