

<b>DOCUMENT NO.</b>	D2023/1825
<b>WORK DESCRIPTION</b>	Condition monitoring equipment maintenance
<b>WPP Number</b>	CMO14BWS 100047
<b>SCOPE:</b>	<p>This SWI is applicable for the worksite protection arrangements using ATWS for routine condition monitoring equipment maintenance activities performed by the Condition Monitoring Operations section.</p> <p>Work activities include but not limited to:</p> <ul style="list-style-type: none"> <li>• Condition monitoring equipment corrective maintenance</li> <li>• Condition monitoring equipment routine maintenance</li> <li>• Maintenance activities in line with NWT310 Lookout Working</li> </ul>
<b>AUTHORISATIONS:</b>	<p><b>Protection Officer/Operator:</b></p> <ul style="list-style-type: none"> <li>• Protection Officer Level 1 or higher, and</li> <li>• WATWS – Wireless Automatic Track Warning System</li> </ul> <p><b>Installer:</b></p> <ul style="list-style-type: none"> <li>• Protection Officer Level 1 or higher, and</li> <li>• WATWS – Wireless Automatic Track Warning System</li> </ul>
<b>SAFETY CONTROLS – Lookout Working (ATWS) arrangements:</b>	<p>The work is performed at a defined worksite inside yard limits, protected using Lookout Working arrangements with Automatic Track Warning System (ATWS) equipment:</p> <ul style="list-style-type: none"> <li>• Installed ATWS sensors for Down direction running on the <b>Down Main South line at 32.768 km</b></li> <li>• Installed ATWS sensors for Up direction running on the on <b>Up Main South line at 34.312 km</b></li> </ul>
<b>PRESTART REQUIREMENTS:</b>	<p>Protection Officer/Operator assessment checklist must be completed before instructions in this SWI are followed.</p> <p>Tools and equipment required:</p> <ul style="list-style-type: none"> <li>• Protection Officer/Operator requires a phone to contact the Signaller.</li> <li>• ATWS equipment (see Required ATWS equipment checklist)</li> <li>• Digital radios</li> </ul>
<b>FURTHER INFORMATION:</b>	<p><i>NWT 300 Planning work in the Rail Corridor</i></p> <p><i>NWT 310 Lookout Working</i></p> <p><i>NGE 200 Walking in the Danger Zone</i></p> <p><i>NPR 711 Using Lookouts</i></p> <p><i>NPR 751 Calculating Minimum Warning Time</i></p> <p><i>NPR 712 Protecting work from rail traffic on adjacent lines</i></p> <p><i>NPR 752 Using Wireless Automatic Warning Systems</i></p> <p><i>NLA 500 Lidcombe- Campbelltown</i></p> <p><i>Lookout Working Prohibited Locations Register</i></p>

**Safe Work Instruction****ATWS Worksite Protection for Warwick Farm condition monitoring equipment maintenance****Protection Officer/Operator assessment checklist**

<b>Protection Officer/Operator's name:</b>		<b>Yes</b> <i>(Tick if Yes)</i>
This document has not expired 12 months beyond the issue date.		
SWI details and protection arrangements have been reviewed and validated for the assessed worksite location, including: <ul style="list-style-type: none"> <li>On-site safety assessment has been completed for relevancy of works being undertaken</li> <li>The required protection details, environment and tasks are unchanged from the details of this SWI</li> </ul>		
The Protection Officer and Qualified Workers deploying the ATWS equipment and protecting the worksite hold WATWS accreditation.		
<b>Corridor Safety Number</b>	<b>Protection Officer Signature</b>	<b>Date</b>

**Warning**

*If an above item does not apply, the Protection Officer must not use this Safe Work Instruction. A new worksite protection plan must be completed in accordance with NRF 014 Worksite Protection Pre-work briefing and NRF 015 Worksite Protection Plan.*

**Required ATWS Equipment**

Item	Description	Quantity
Aerial	Telescopic Aerial	3
Assembly Kit	Orange Bag with Tools	1
Battery ZA24-2.9	Small battery for Junction Box and Transmitter	4
Device Frame	Protective Frame	2
F500-AB Junction Box	Receiver Device	2
F500-SEN Train Sensor	Sensor	2
Housing for Aerial	Housing for Telescopic Aerial	3
KF5-5 Extension Cable	Extension Cable (5m) for F500-SEN to F500-AB	1
Mobile Backpack	Harness for Device	0
Pouch	Pouch for small battery	2
Tripod	Tripod for Device	3
ZFS Radio Transmitter	Radio Transmitter Device	2
ZPW Warning Unit	Control and Warning Device	1

**Safe Work Instruction**

**ATWS Worksite Protection for Warwick Farm condition monitoring equipment maintenance**



**Worksite Protection Pre-work Briefing**

Briefing date:  /  /

**Protection Officer details**

name  signature  contact No.

Work location:

Scope of work: **Condition monitoring equipment maintenance**

Worksite protection:  Lookout Working (ATWS) Refer to Worksite Protection Plan for details

Hazards (e.g. Site specific hazards identified, including physical environment, human errors, plant and equipment)	Controls (to be implemented to eliminate or reduce the risk to the lowest practicable level)	Person responsible for Control
<b>Approaching rail traffic</b>	Lookout Working using ATWS Workers to remain within worksite limits. Workers to be within 50m of a warning device	Protection Officer/Operator
<b>Unidirectional running</b>	ATWS sensors placed for all entry points into the worksite	Protection Officer/Operator
<b>Unsignalled rail traffic movements</b>	Dedicated Lookouts placed watching for unsignalled movements in both directions	Lookout
<b>Miscount of multiple train warnings</b>	Protection Officer/Operator must call out to workers the: <ul style="list-style-type: none"> <li>number of train warnings, and</li> <li>clearing of each train warning.</li> </ul> Dedicated Lookouts must confirm with the Protection Officer/Operator when rail traffic has cleared the worksite and which train warning that rail traffic belonged to.	Protection Officer/Operator and Workplace Supervisor
<b>Electric shock</b>	Operators must make sure ATWS antennae length does not breach Safe Approach Distance (SAD) to overhead wiring.	All
<b>Mobile phone distraction</b>	Mobile phone usage is not allowed in the Danger Zone. Mobile phones may be used only in a safe place after informing the Protection Officer.	All
<b>Digital radios</b>	Digital radios only to be used in a safe place. GRN radios must not be used.	All
<b>Obstructions or uneven surfaces in the exit path to a safe place</b>	Before commencing work, a route to the safe place is to be agreed upon taking obstructions and uneven surfaces into consideration.	Workplace Supervisor
<b>Exposure to excessive noise</b>	Workers must not stand directly in front of audible warning devices.	All
<b>Slips, trips, falls and hazards carrying ATWS equipment</b>	Areas of concern are marked and/or identified to all workers. Designated work areas to be established and kept free of hazards. Established walk areas to be utilised where established.	All



Safe Work Instruction

ATWS Worksite Protection for Warwick Farm condition monitoring equipment maintenance



Worksite Protection Plan – Lookout Working

Signaller Details

Signaller details fields: [ ], Sefton Panel, 02 8568 3427

Protection Officer Details

Protection Officer details fields: name, signature, contact No., RSW or RIW No., designation, Planned duration

Workplace Supervisor details: [ ]

Type of work: Condition monitoring equipment maintenance

Worksite Location (tick the tracks that apply)
On the Up Main South line [ ]
between S 21.2 Auto Signal and S 20.8 Auto Signal
On the Down Main South line [ ]
between LL 199 Accept Signal and Platform 2

Worksite Assessment

Has the Lookout Working Prohibited Locations Register been consulted? Yes [ ]

Warning method

Warning method fields: ATWS, Voice/Touch

Minimum Warning Time Calculations

Maximum track speed 100 km/h

Number of ATWS Sensors used 2 Position of ATWS Sensors 32.768 km and 34.312 km

Number of dedicated Lookouts used 1 Position of Lookouts 33.618 km to 33.737 km

Note - Lookouts are relocated to positions within these KMs as workers move along the worksite.

Calculation diagram for ATWS sensors: 7 sec See Time (S) + 3 sec Move Time (M) + 10 sec Safe Time = Minimum Warning Time (MWT) 20 sec. Track speed 100 km/h. Minimum Sighting Distance as calculated 556 metres.

Dedicated Lookout

Calculation diagram for Dedicated Lookout: 2 sec See Time (S) + 3 sec Move Time (M) + 10 sec Safe Time = Minimum Warning Time (MWT) 15 sec. Track speed 25 km/h. Minimum Sighting Distance as calculated 105 metres.

Where are the safe places identified for the Lookouts and the workers?

Lookouts: Up and Down Cess

Workers: Up and Down Cess

Ensure the workers have been briefed about these work details Yes [ ]



<b>INSTRUCTIONS:</b>	<ol style="list-style-type: none"> <li>1. Workers enter the rail corridor via access gate <b>S00 33.449 U.</b></li> <li>2. Protection Officer conducts the worksite protection pre-work briefing.</li> <li>3. Protection Officer contacts Sefton Panel to tell the Signaller about the use of ATWS.</li> <li>4. Setup ATWS Worksite Warning System as per installation instructions</li> <li>5. Install/calibrate/verify Down ATWS sensor at <b>32.768 KM</b> on the <b>Down Main South line.</b></li> <li>6. Install /calibrate/verify Down ATWS sensor at <b>34.312 KM</b> on the <b>Up Main South line.</b></li> <li>7. Test ATWS equipment.</li> <li>8. Place dedicated Lookout.</li> <li>9. Workers start work.</li> <li>10. After work is completed, workers move into a safe place.</li> <li>11. Turn off ATWS Warning unit.</li> <li>12. Turn off and remove all ATWS transmitter units.</li> <li>13. All workers egress the rail corridor via access gate <b>S00 33.449 U.</b></li> <li>14. Protection Officer contacts the Signaller at Sefton Panel to end ATWS.</li> </ol>
----------------------	--

<b>ADDITIONAL DETAILS</b>	<p><u>ATWS Sensor plate test calibration</u></p> <p>Whilst performing the plate test calibration, make sure to look for rail traffic approach.</p>
---------------------------	--

**Setup checklist for ATWS worksite warning unit on the Main South line at 33.677 km**

Installer name		
Step	Task Description	Installer Initials
1	Verify Worksite Start Location with Kilometres	
2	Confirm Audible Level	
3	Confirm and Set Radio Channel for Warning Unit	
4	Book in ATWS sensor 1	
5	Book in ATWS sensor 2	
6	Perform Worksite Warning Test with all ATWS sensors	
7	Ensure the workers have seen the visual warning and heard the audible warning	
8	Select and Confirm Channel for the Radio Transmitter	
9	Confirm worksite warning unit is operational with Installers and advise them to lock devices and remove key	
10	Lock device and remove key	

Diagram

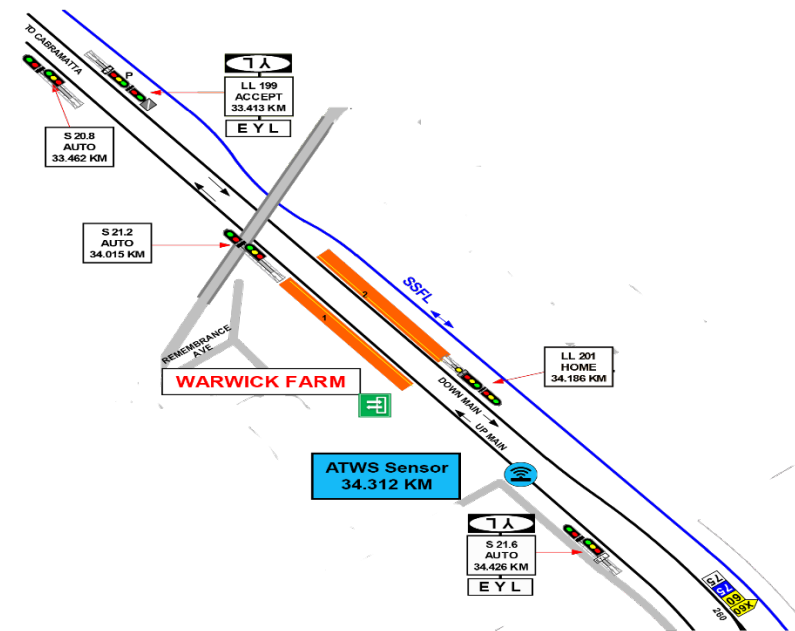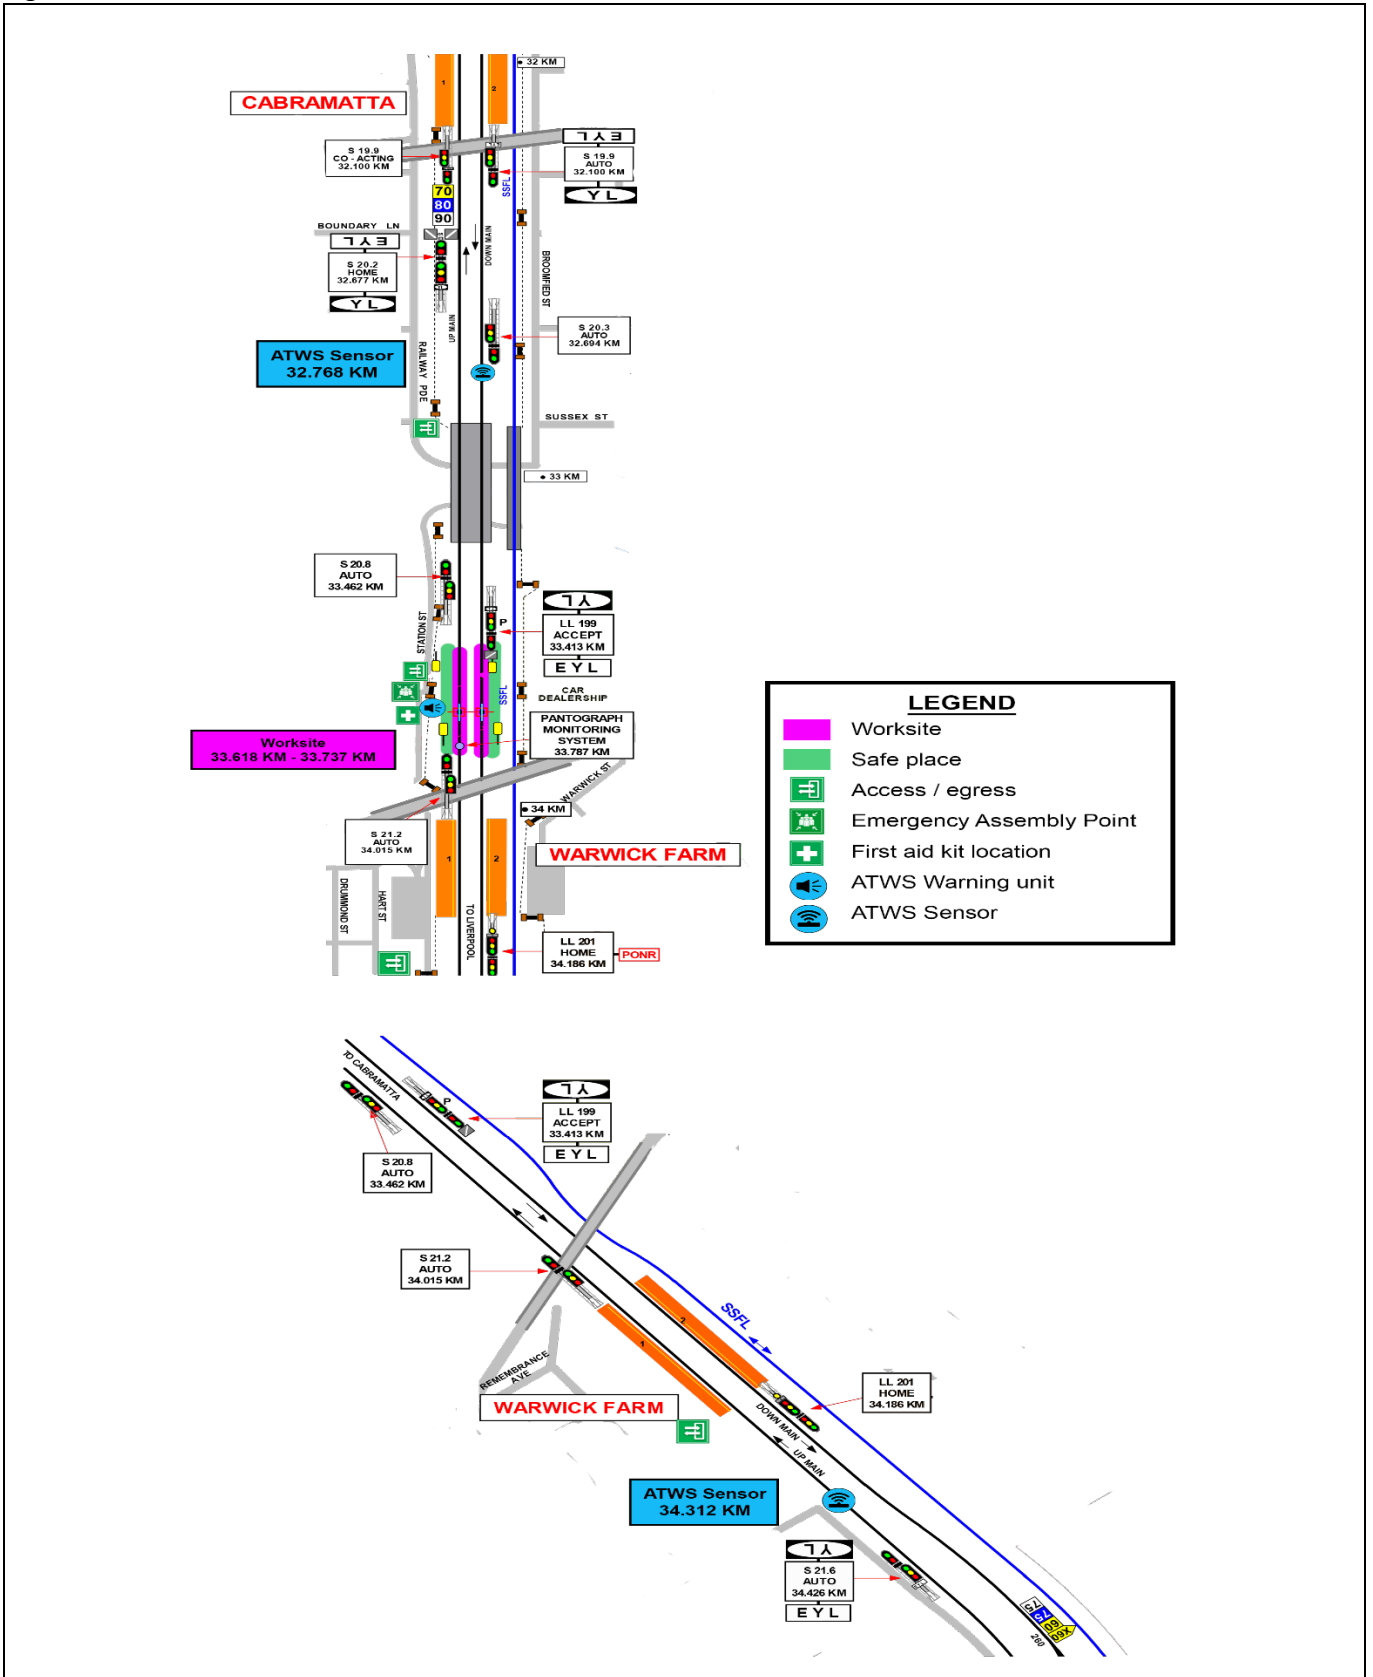





*(This page can be separated from the worksite protection plan to be given to the assigned installer)*

**Installation checklist for ATWS transmitter and sensor on Down Main South line at 32.768 KM**

Installer name		
Step	Task Description	Installer Initials
1	Verify Track Label for Location of Sensor as per the Protection Diagram and Photos in this document	
2	Sensor clamp (SK150) pre-adjusted according to the rail profile as per the Worksite Protection Diagram	
3	Sensor Direction is Installed as per Worksite Protection Diagram and Photos in this document	
4	Connect Sensor Cable to Junction Box	
5	Confirm all batteries are fully charged	
6	Connect Junction Box to ZFS using Channel T1 –T4	
7	Commence calibration and automatic self-test	
8	Perform function test using Test Plate (Strike In)	
9	Perform first rail traffic activation test	
10	Confirm Transmitter booked in to correct T-channel (T1-T4)	
11	Select and Confirm Channel for the Radio Transmitter	
12	Perform Worksite Warning Test using Test Plate	
13	Lock Device and Remove Key	



**Image 1: Sensor installation location - ATWS Sensor access gate S00 32.861 U**

*(This page can be separated from the worksite protection plan to be given to the assigned installer)*

Installation checklist for ATWS transmitter and sensor on Up Main South Line 34.312 KM

Installer name		
Step	Task Description	Installer Initials
1	Verify Track Label for Location of Sensor as per the Protection Diagram and Photos in this document	
2	Sensor clamp (SK150) pre-adjusted according to the rail profile as per the Worksite Protection Diagram	
3	Sensor Direction is Installed as per Worksite Protection Diagram and Photos in this document	
4	Connect Sensor Cable to Junction Box	
5	Confirm all batteries are fully charged	
6	Connect Junction Box to ZFS using Channel T1-T4	
7	Commence calibration and automatic self-test	
8	Perform function test using Test Plate (Strike In)	
9	Perform first rail traffic activation test	
10	Confirm Transmitter booked in to correct T-channel (T1-T4)	
11	Select and Confirm Channel for the Radio Transmitter	
12	Perform Worksite Warning Test using Test Plate	
13	Lock Device and Remove Key	



Image 1: ATWS Sensor Access gate S00 34.088 U



Image 2: Sensor location on the Up Main South line.