## **ATWS Worksite Protection for Minto condition and** monitoring equipment maintenance



DOCUMENT NO.	D2022/10997		
WORK DESCRIPTION	Condition monitoring equipment maintenance		
WPP Number	CMO10BWS 10047		
SCOPE:	This SWI is applicable for the worksite protection arrangements using ATWS for routine condition monitoring equipment maintenance activities performed by the Condition Monitoring Operations section.  Work activities include but not limited to:  Condition monitoring equipment corrective maintenance  Condition monitoring equipment routine maintenance  Maintenance activities in line with NWT310 Lookout Working		
AUTHORISATIONS:	Protection Officer/Operator:  • Protection Officer Level 1 or higher, and  • WATWS – Wireless Automatic Track Warning System  Installer:  • Protection Officer Level 1 or higher, and  • WATWS – Wireless Automatic Track Warning System		
SAFETY CONTROLS – Lookout Working (ATWS) arrangements:	The work is performed at a defined worksite inside yard limits, protected using Lookout Working arrangements with Automatic Track Warning System (ATWS) equipment:  • Installed ATWS sensors for Down direction running on the <b>Down Main South line</b> at <b>48.268 km</b> • Installed ATWS sensors for Up direction running on the on <b>Up Main South line</b> at <b>49.860 km</b>		
PRESTART REQUIREMENTS:	Protection Officer/Operator assessment checklist must be completed before instructions in this SWI are followed.  Tools and equipment required:  Protection Officer/Operator requires a phone to contact the Signaller.  ATWS equipment (see Required ATWS equipment checklist)  Digital radios		
FURTHER INFORMATION:	NWT 300 Planning work in the Rail Corridor  NWT 310 Lookout Working  NGE 200 Walking in the Danger Zone  NPR 711 Using Lookouts  NPR 751 Calculating Minimum Warning Time  NPR 712 Protecting work from rail traffic on adjacent lines  NPR 752 Using Wireless Automatic Warning Systems  NLA 500 Lidcombe- Campbelltown  Lookout Working Prohibited Locations Register		

SWI Custodian: Condition Monitoring Operation Manager SWI Approver: Associate Director Maintenance Operation UNCONTROLLED COPY WHEN PRINTED

Issue Date: 25/01/2024 Version: 1.1 Page 1 of 10

## **ATWS Worksite Protection for Minto condition and** monitoring equipment maintenance



Protection Officer/Operator assessment checklist			
Protection Officer/Operator's name:			Yes (Tick if Yes)
This document has not expired 12 months be	eyond the issue date.		
On-site safety assessment has been complete briefing (Page 3).	ed and additional hazards and controls recorde	d on the pre-work	
SWI details and protection arrangements have been reviewed and validated for the assessed worksite location.			
The Protection Officer and Qualified Workers deploying the ATWS equipment and protecting the worksite have been inducted into the requirements of the ATWS protection method for the location.			
Corridor Safety Number Protection Officer Signature Da			te

### Warning

If an above item does not apply, the Protection Officer must not use this Safe Work Instruction. A new worksite protection plan must be completed in accordance with NRF 014 Worksite Protection Pre-work briefing and NRF 015 Worksite Protection Plan.

Required ATWS Equipment				
Item Description Quant				
Aerial	Telescopic Aerial	3		
Assembly Kit	Orange Bag with Tools	1		
Battery ZA24-2.9	Small battery for Junction Box and Transmitter	4		
Device Frame	Protective Frame	2		
F500-AB Junction Box	Receiver Device	2		
F500-SEN Train Sensor	Sensor	2		
Housing for Aerial	Housing for Telescopic Aerial	3		
KF5-5 Extension Cable	Extension Cable (5m) for F500-SEN to F500-AB	0		
Mobile Backpack	Harness for Device	0		
Pouch	Pouch for small battery	2		
Tripod	Tripod for Device	3		
ZFS Radio Transmitter	Radio Transmitter Device	2		
ZPW Warning Unit	Control and Warning Device	1		

SWI Custodian: Condition Monitoring Operation Manager SWI Approver: Associate Director Maintenance Operation UNCONTROLLED COPY WHEN PRINTED Issue Date: 25/01/2024 Version: 1.1 Page 2 of 10

## **ATWS Worksite Protection for Minto condition and** monitoring equipment maintenance



### **Worksite Protection Pre-work Briefing**

onto atten Office Details	Briefing date:	/ /
rotection Officer Details	signature	contact N
Work location:		
Scope of work: Condition monitoring equipm	ent maintenance	
Vorksite protection: Lookout Working (ATWS)	Refer to Worksite Prote	ction Plan for details
<b>Hazards</b> (e.g. Site specific hazards identified, including physical environment, human errors, plant and equipment)	Controls (to be implemented to eliminate or reduce the risk to the lowest practicable level)	Person responsible for Control
Approaching rail traffic	Lookout Working using ATWS  Workers to remain within worksite limits.  Workers to be within 50m of a warning device	Protection Officer/Operator
Unidirectional running / bi-directional running	ATWS sensors placed for all entry points into the worksite	Protection Officer/Operator
Unsignalled rail traffic movements	Dedicated Lookouts placed watching for unsignalled movements in both directions	Lookout
Miscount of multiple train warnings	Protection Officer/Operator must call out to workers the:  • number of train warnings, and • clearing of each train warning.  Dedicated Lookouts must confirm with the Protection Officer/Operator when rail traffic has cleared the worksite and which train warning that rail traffic belonged to.	Protection Officer/Operator and Workplace Supervisor
Electric shock	Operators must make sure ATWS antennae length does not breach Safe Approach Distance (SAD) to overhead wiring.	All
Mobile phone distraction	Mobile phone usage is not allowed in the Danger Zone.  Mobile phones may be used only in a safe place after informing the Protection Officer.	All
Digital radios	Digital radios only to be used in a safe place. GRN radios must not be used.	All
Obstructions or uneven surfaces in the exit path to a safe place	Before commencing work, a route to the safe place is to be agreed upon taking obstructions and uneven surfaces into consideration.	Workplace Supervisor
Exposure to excessive noise	Workers must not stand directly in front of audible warning devices.	All
Slips, trips, falls and hazards carrying ATWS equipment	Areas of concern are marked and/or identified to all workers. Designated work areas to be established and kept free of hazards. Established walk areas to be utilised where established.	All

# **ATWS Worksite Protection for Minto condition and**



m	onito	ring equip	ment maintenance				, Cojamoj m	
Work	place Su	pervisor details						
			name				contac	t No
Emergency assembly point:			SWMS/SW	I Ref #:				
First loca	aid kit tion:	Vehicles		First aider:				
Work	place S	upervisor ackı	nowledgement					
The V	- Vorkplace Si	- upervisor acknowledg	es that all identified WHS and rail safety and/or eliminate the hazards.	hazards have the	Yes		signa	iture
Parti	cipant A	cknowledgem	ent					
NO.	TE: Recipier	its of the briefing are t	o question the Briefer if they don't under	stand any part of	this briefing.			
		d below acknowledge		7,				
1.		inducted to the site		6. have be	en briefed or	the contents	s of the Worksite Protection Plan	
2.	are free fro	om alcohol and drugs		7. have be	en shown the	e Worksite Pr	otection Plan diagram	
3.	are free fro	om the effects of fatigu	ue .	8. understa	and the kinds	and limits of	worksite protection in place	
4. 5.	licence an	d/or induction record e	Rail Safety Worker Authorisation, trade e.g. Construction Industry Induction onal Protective Equipment (PPE)	the final		on ( <i>final site in</i> :	hazards and controls identified du spection must be conducted immediately	
			f the item applies or a cross 🗷 if the item does	s not annly		<u>,                                      </u>		
╽⊔	have been required)	informed of the requi	rements of the electrical permit (if	have been made aware of any hazardous materials/substances on site  have been briefed on Safety Data Sheets (SDS)				
	have been	briefed on the SWMS	S/SWIs/documented safe work practice	, , , ,				
for the job  have been instructed in the controls recorded in this document and			I —			anagement plan of adjoining worksites/processes.		
Nar	SWMS/SV ne	/Is	Signature	Time of brief	ing:		Amendment briefing:	
			-	hh:mm			hh:mm and initial	
1			i				1	

SWI Custodian: Condition Monitoring Operation Manager SWI Approver: Associate Director Maintenance Operation UNCONTROLLED COPY WHEN PRINTED

Issue Date: 25/01/2024 Version: 1.1 Page 4 of 10

## ATWS Worksite Protection for Minto condition and monitoring equipment maintenance



	ing equipment maintenance	
Worksite Pro Signaller Deta	tection Plan – Lookout Working	
Signaller Deta	Campbelltown Panel 02 4629	0828
Protection Off		
	name signature contact	ct No.
	RSW or RIW No. designation Planned duration	
Workplace Su	pervisor details:	
Type of work:	Condition monitoring equipment maintenance	
Worksite I	ocation	
On the	Up Main South line	П
between	30.8 Auto Signal and 30.2 Auto Signal	
On the	Down Main South line	
L .		
between	MO1 Accept Signal and MO3 Home/starter Signal	
Minimum War	ATWS Voice/Touch	
Minimum War	ing Time Calculations	
Maximum track	speed 115 km/h	
Number of ATV	S Sensors used  2 Position of ATWS Sensor 48.268 km and 49.860 km	
Number of ded	eated Lookouts used 1 Position of Lookouts 49.137 km to 49.212 km	
Note - Lookouts a	re relocated to positions within these KMs as workers move along the worksite.	
7 sec	3 sec + 10 sec 20 sec 115 km/h 639 metres	
7 sec	3 sec + 10 sec = Minimum Warning 20 sec 115 km/h 639 metres	
See Time (S)		
Dedicated Look	Distance as calculated	
2 sec +	3 sec + 10 sec = Minimum Warning Time 15 sec 25 km/h 105 metres	
See Time (S)	Move Time Safe Time $(S+M+10 \text{ sec} = MWT)$ Track speed Minimum Sighting Distance as calculated	
Where are th	e safe places identified for the Lookouts and the workers?	
Lookouts:	Jp and Down CESS	
Workers:	Jp and Down CESS	

Ensure the workers have been briefed about these work details Yes  $\square$ 

Diagrams, notes, and detailed instructions of worksite protection arrangements are over the next pages. These are to be read and followed as part of this worksite protection plan for Lookout Working with ATWS.

## **ATWS Worksite Protection for Minto condition and** monitoring equipment maintenance



INSTRUCTIONS:	1. Workers enter the rail corridor via access gate S00 49.494 D.
	<ol><li>Protection Officer conducts the worksite protection pre-work briefing.</li></ol>
	3. Protection Officer contacts Campbelltown Panel to tell the Signaller about the use of ATWS.
	4. Setup ATWS Worksite Warning System as per installation instructions
	5. Install/calibrate/verify Down ATWS sensor at 48.268 KM on the Down Main South line.
	6. Install /calibrate/verify Up ATWS sensor at <b>49.860 KM</b> on the <b>Up Main South line</b> .
	7. Test ATWS equipment.
	8. Place dedicated Lookout.
	9. Workers start work.
	10. Once work is completed, workers move into a safe place.
	11. Turn off ATWS Warning unit.
	12. Turn off and remove all ATWS transmitter units.
	13. All workers egress the rail corridor via access gate S00 49.494 D.
	14. Protection Officer contacts the Signaller at Campbelltown Panel to end ATWS.
ADDITIONAL	ATWS Sensor plate test calibration
DETAILS	Whilst performing the plate test calibration, make sure to look for rail traffic approach.
	Unsignalled rail traffic movements
	Unsignalled rail traffic movements may occur on any line from any direction.
	Dedicated Lookouts must remain within sighting and hearing of workers whilst watching for unsignalled rail traffic approach.

nstaller name		
Step	Task Description	Installer Initials
1	Verify Worksite Start Location with Kilometres	
2	Confirm Audible Level	
3	Confirm and Set Radio Channel for Warning Unit	
4	Book in ATWS sensor 1	
5	Book in ATWS sensor 2	
6	Perform Worksite Warning Test with all ATWS sensors	
7	Ensure the workers have seen the visual warning and heard the audible warning	
08	Select and Confirm Channel for the Radio Transmitter	
09	Confirm worksite warning unit is operational with Installers and advise them to lock devices and remove key	
10	Lock device and remove key	

Setup checklist for ATWS worksite warning unit at Main South line at 49.180 KM

SWI Custodian: Condition Monitoring Operation Manager SWI Approver: Associate Director Maintenance Operation UNCONTROLLED COPY WHEN PRINTED **OFFICIAL** 

Issue Date: 25/01/2024 Version: 1.1 Page 6 of 10

### **ATWS Worksite Protection for Minto condition and** monitoring equipment maintenance



Diagram ΙŅΞ 29.3 AUTO 47.076 KM Legend 70 115 115 Worksite YD Safe place BOW BOWING IVI Access / egress IN 24 AUTO/CONT **Emergency Assembly Point** First aid kit location ATWS Warning unit ATWS Sensor **ATWS Sensor** 48.268 KM 48.162 KM BOW BOWING CK 30.2 AUTO 48.628 KM Worksite 49.137 KM - 49.212 KM ACCEPT 48.886 KN 49 KM UP BBT REPORTS TO SYDENHAM SIGNALBOX ( GLENFIELD PANEL ) DOWN BBTS TO CAMPBELLTOWN SIGNALBOX **MINTO MINTO** MO 3 ME / STARTING 49.716 KM **ATWS Sensor** 49.860 KM • 50 KM MO 4 HOME / STARTING 50.092 KM

## **ATWS Worksite Protection for Minto condition and** monitoring equipment maintenance



(This page can be separated from the worksite protection plan to be given to the assigned installer)

Installation checklist for ATWS transmitter and sensor on Down Main South line at 48.268 KM				
aller name				
Step	Task Description	Installe: Initials		
1	Verify Track Label for Location of Sensor as per the Protection Diagram and Photos in this document			
2	Sensor clamp (SK150) pre-adjusted according to the rail profile as per the Worksite Protection Diagram			
3	Sensor Direction is Installed as per Worksite Protection Diagram and Photos in this document			
4	Connect Sensor Cable to Junction Box			
5	Confirm all batteries are fully charged			
6	Connect Junction Box to ZFS using Channel T1			
7	Commence calibration and automatic self-test			
8	Perform function test using Test Plate (Strike In/Strike Out)			
9	Perform first rail traffic activation test			
10	Confirm Transmitter booked in to correct T-channel (T1)			
11	Select and Confirm Channel for the Radio Transmitter			
12	Perform Worksite Warning Test using Test Plate			
13	Lock Device and Remove Key			





SWI Custodian: Condition Monitoring Operation Manager SWI Approver: Associate Director Maintenance Operation UNCONTROLLED COPY WHEN PRINTED

OFFICIAL

Date: 25/01/2024 Version: 1.1 Page 8 of 10

## **ATWS Worksite Protection for Minto condition and** monitoring equipment maintenance



Image 1: ATWS Sensor Access gate Unknown Number

Image 2: Sensor location on the Dn Main South line.

(This page can be separated from the worksite protection plan to be given to the assigned installer)

li li	nstallation checklist for ATWS transmitter and sensor on Up Main South Line 49.860 KM	
staller name		
Step	Task Description	Installer Initials
1	Verify Track Label for Location of Sensor as per the Protection Diagram and Photos in this document	
2	Sensor clamp (SK150) pre-adjusted according to the rail profile as per the Worksite Protection Diagram	
3	Sensor Direction is Installed as per Worksite Protection Diagram and Photos in this document	
4	Connect Sensor Cable to Junction Box	
5	Confirm all batteries are fully charged	
6	Connect Junction Box to ZFS using Channel T1-T4	
7	Commence calibration and automatic self-test	
8	Perform function test using Test Plate (Strike In)	
9	Perform first rail traffic activation test	
10	Confirm Transmitter booked in to correct T-channel (T1-T4)	
11	Select and Confirm Channel for the Radio Transmitter	
12	Perform Worksite Warning Test using Test Plate	
13	Lock Device and Remove Key	



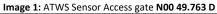




Image 2: Sensor location on the Up Main South line.

## **ATWS Worksite Protection for Minto condition and** monitoring equipment maintenance



**Protection Officer's diarv** 

Date	Time	Notes
Date	Time	Hotes
1	1	1